

Trolley for Emergency Shower compliance testing

Fast and easy testing:

The BROEN-LAB Trolley helps to speed up and simplify manual monthly performance checks for emergency showers. It enables checks for volume flow, jet height and water quality to be carried out in a quick and hygienic manner by just one person. As a result, testing can be quickly and effectively achieved without handling buckets and having to clear up spillages.

The practical trolley comes equipped with a sturdy funnel to ensure that you do not spill a drop of water. It is easily adjustable and can be raised to a maximum height of 2.3 metres. Thanks to the powerful pump, the large capacity trolley can be emptied again in a matter of seconds.

The trolley's compact design means that it is ideal for carrying out checks in accordance with the requirements of DIN EN 15154-1 and ANSI Z358.1.

A single device for a range of different checks:

- Volume flow measurement
- Visual check of spray patterns
- Visual check of water quality


Key benefits:

- Quick
- Clean
- Versatile
- Flexible
- Compact
- Durable

Even easier

BROEN-LAB offers complete service of Emergency Shower Systems.

Contact us for more information!

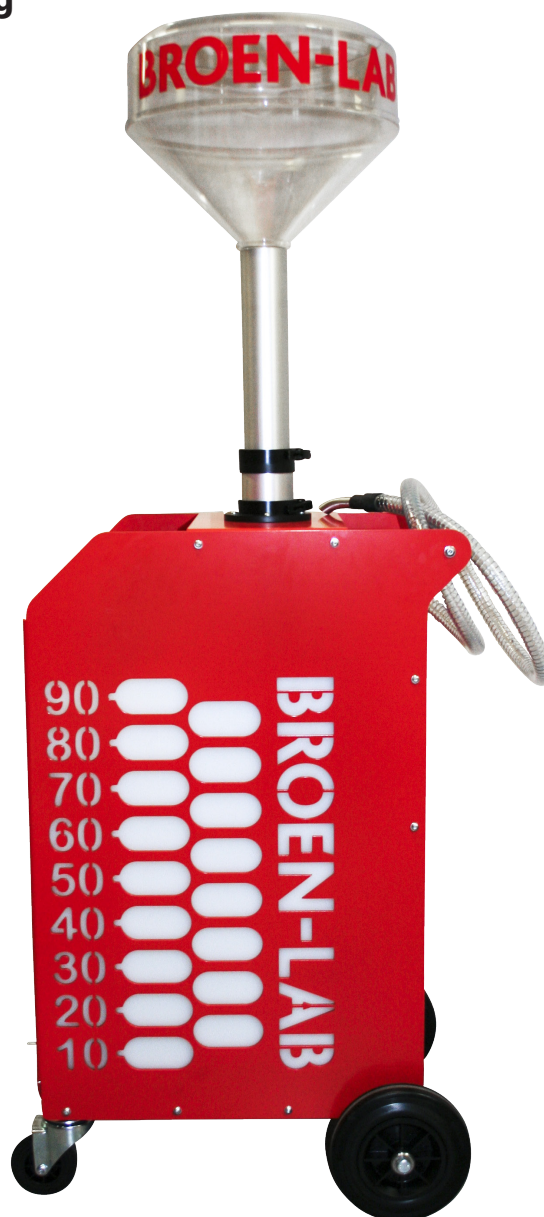

Trolley for Emergency Shower compliance testing

Details:

- 2 fixed wheels, 2 lockable castors
- 1.5 m pump hose
- 90 l capacity
- High-performance pump (drains in approximately 2 min.)
- Low level tap for gravity discharge to drain
- CE and UKCA marked

Material:

- Sturdy polyethylene plastic tank
- Powder coated aluminium frame
- Telescopic pipe: anodised aluminium
- Polycarbonate funnel

Connections:

- 8 m electricity cable
- Outlet valve with 3/4" thread

Weight:

- 27 kg when empty

Options:

- Rollers for loading
- Without pump

Item number:

- 27570211000001

